

① Please connect both the NVR and the computer to the same router.


② Please download "IPCam Suite" software on computer.

**Download link:**


[https://drive.google.com/drive/folders/1\\_X64MPHJiOLbV27WjoPj7ir2mYgPRy7Y?usp=sharing](https://drive.google.com/drive/folders/1_X64MPHJiOLbV27WjoPj7ir2mYgPRy7Y?usp=sharing)

③ Run "IPCam Suite" software on computer.


- (1) Click "Refresh", then you will search the NVR
- (2) Please click "NVR"
- (3) Then click "Web View"

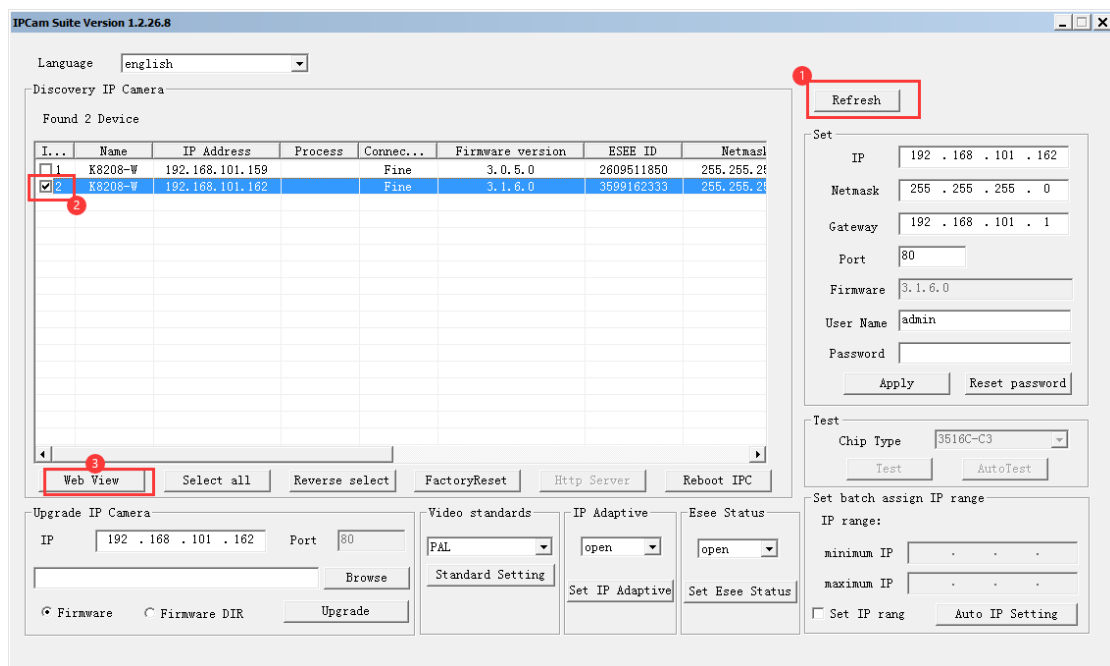

④ After click "Web view", it will jump to the browser to log in to the NVR.

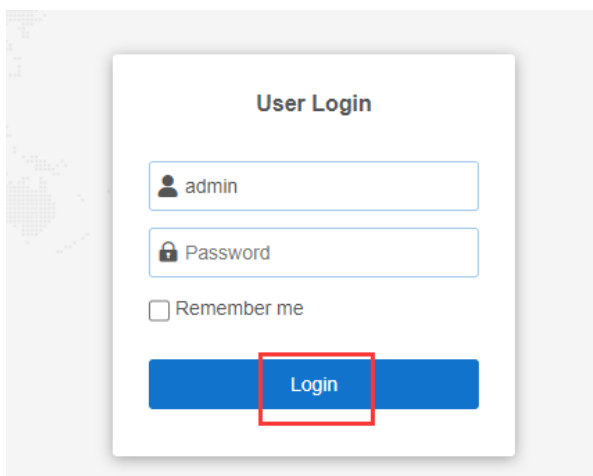

5 After login in, please click "settings"

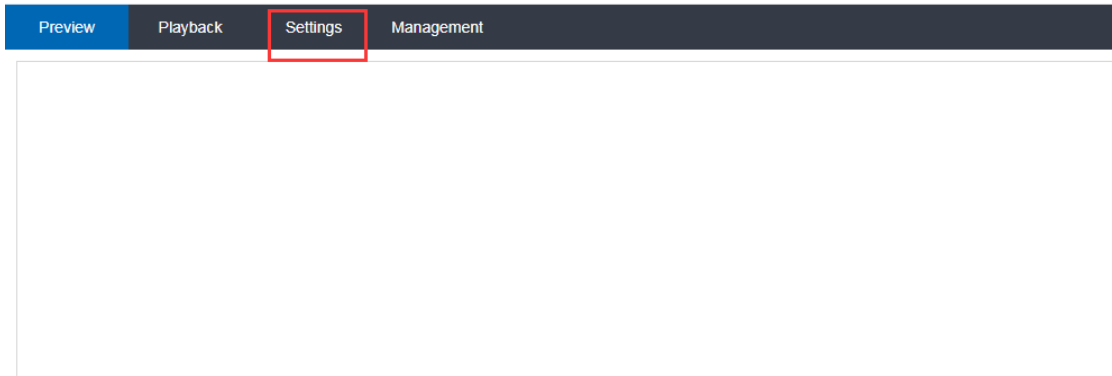

6 Please click "Time settings" --- "VGA Resolution", select a resolution that the monitor can support, then click "Save".

