

7. How to change the position of the camera on the screen?

Move the mouse to the camera image, keep pressing the left mouse button, drag to other channel, release the mouse, the NVR will pop up "Detected window drag operation, whether to save the drag after the window layout ", click "OK".

