
8. Snapshot configuration

Please right-click mouse navigates to Main Menu --> System--> Snapshot Conf.

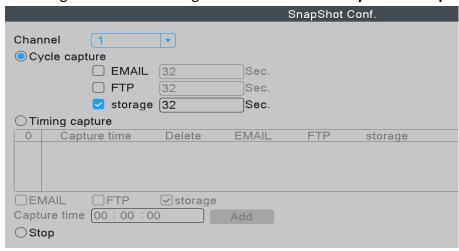

Cycle capture: The camera will take snapshots periodically. For example, the default snapshot period is 32 seconds, it means the camera will automatically take snapshot every 32 seconds.

Time capture: The camera will take snapshots at the time that you set.

Email: The camera will send the snapshots capture to your email (Please right-click mouse navigates to Main Menu -->network-->Net Service to setup your email (See page 19 for setup).

FTP: Not applicable.

Storage: The NVR will store the snapshots capture in the HDD (Please right-click mouse navigates to Main Menu --> Advanced-->HDD info, Select the drive and click on "Partition" to set the record partition and image partition)

Note: Note: NVR cannot view screenshots, you can view them on your computer software VMS: after logging into VMS software, click on "playback", select the channel, choose "picture", click on "search", double click on the searched picture to view it.

