

15. How to setup the time and date of NVR?

- 1 Please login NVR and right-click mouse navigates to **Main Menu --> Date Time**, choose the correct time zone and time.

Time Zone: Eastern Time: -05:00 Central Time: -06:00 Mountain Time: -07:00
Pacific Time: -08:00

Time Zone: [UTC-08:00]Pacific Time(U.S.)
System Time: 05-04-2022 01:08:37
Date Format: DD MM YY
Date Separator: -
Time Format: 24-HOUR
DST:

- 2 Please right-click mouse navigates to **Main Menu --> Network--> Net Service-->**

NTP, check “Enable”, after the NVR is connected to the network, the time will be automatically corrected every 60 minutes.

NTP
Enable:
Custom: Auto:
Server IP: NTP
Port: 123
Update Period: 60 min
OK Cancel