

2. What if one camera stops working and doesn't show picture on the monitor?

One camera has no picture, the possible reasons are as follow:

1. The defective camera or power supply.
2. The camera was deleted or IPC parameters were modified.
3. The network cable is broken.

Troubleshooting:

- ① Change the camera to another POE network port of the NVR, can it work? if not, please move to the next step.
- ② Right-click mouse navigates to **Quick set** , search camera and add.
- ③ If you can't find the camera, please change a network cable and try again.